

DVS10
SECTIONAL VALVE









2nd edition DVS10.01 This catalogue shows the product in the most standard configurations. Please contact our Sales Dpt. for more detailed information or special requests. **WARNING!** All specifications of this catalogue refer to the standard product at this date. Walvoil, oriented to a continuous improvement, reserves the right to discontinue, modify or revise the specifications, without notice. WALVOIL IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY AN

INCORRECT USE OF THE PRODUCT.







Applications

DVS10 is a new family in the broad range of Hydrocontrol sectional valves.

Specifically designed for mini skid loaders and mini dumper applications, DVS10 can include different components normally assembled on the machine.

The Valve has very exact control characteristics, smoth and precise in operation, with compact light weight design. Numerous configurations and solutions are possible.

Working sections have auxiliary valves and a broad range of interchangeable spools.











QUICK REFERENCE GUIDE

GENERAL SPECIFICATION	D9	DЗΜ	DVS10	D4	D6	D16	D12	DVS20	D20	D25	D40
Working sections number	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-10
CIRCUIT											
Parallel	•	•	•	•	•	•	•	•	•	•	•
Series	•	•	•	•	•	•	•		•	•	
Tandem	•	•	•	•	•	•		•	•		
Parallel circuit stroke (mm)	6	5	6	6	7	7	9,5	9,5	9,5	12	15
Series circuit stroke (mm)	6	5	6	6	5	7	6,5		6,5	8,5	
Float spool extra stroke (mm)	5	5	5	5,5	6	7	7	7	7	9,5	10
Spools pitch (mm)	31	38	35	40	46	46	56	56	64	75	91
RATED FLOW											
Max recommended flow rate (I/min)	35	55	45	80	100	150	180	250	250	380	700
Max recommended flow rate (GPM)	10	15	12	22	27	40	48	67	67	100	185
RATED PRESSURE											
Max working pressure (bar)	350	350	350	350	350	350	350	250	350	350	350
Max working pressure (PSI)	5000	5000	5000	5000	5000	5000	5000	4000	5000	5000	5000

OPTION CHART	D9	рзм	DVS10	D4	D6	D16	D12	DVS20	D20	D25	D40
Direct acting pressure relief valve	•	•	•	•	D0	DIO	DIZ	DV320	D20	D23	טדט
Pilot operated pressure relief valve		•		•	•	•	•	•	•	•	•
2 stage pilot operated relief valve		•		•	•	•	•		•	•	•
Externally piloted valve	•	•	•	•	•	•	•			•	
· · ·									_	_	_
Solenoid dump valve (12 Vdc) Solenoid dump valve (24 Vdc)	•	•	•	•	•	•	•				
. , , ,			•			•					
Main anticavitation check valve		•		•	•	•	•	•	•	•	•
Clamping valve		•	•	•							
SPOOL ACTUATION											
Manual control	•	•	•	•	•	•	•	•	•	•	•
Without lever	•	•	•	•	•	•	•	•	•	•	•
90° joystick control		•	•	•	•	•					
Hydraulic control	•	•	•	•	•	•	•	•	•	•	•
Direct electric control (12-24 Vdc)		•		•							
SPOOL RETURN ACTION											
Spring return	•	•	•	•	•	•	•	•	•	•	•
Detent in A - in B - in A/B	•	•	•	•	•	•	•	•	•	•	•
Detent in 4 th position	•	•	•	•	•	•	•	•	•	•	•
Arrangement for dual control	•	•		•	•	•	•		•		
Hydraulic load limit	•	•		•	•	•					
Pneumatic control ON - OFF		•	•	•	•	•	•	•	•		
Proportional pneumatic control		•	•	•	•	•	•	•	•		
Electrical load limit	•	•		•	•	•					
Electrohydraulic control ON-OFF (12-24 Vdc)		•	•	•	•	•	•	•	•		
Electrohydraulic control PROP. (12-24 Vdc)		•	•	•	•	•	•	•	•		
Electropneumatic control (12-24 Vdc)		•	•	•	•	•	•		•		
AUXILIARY VALVES											
Antishock valve	•	•	•	•	•	•	•	•	•	•	•
Anticavitation valve	•	•	•	•	•	•	•	•	•	•	•
Combined valve	•	•	•		•	•	•		•	•	•
Pilot combined valve						•		•	•	•	•



GENERAL INDEX

4	General specifications
	Standard working conditions
	Fluid options
5	Order example
	Standard thread
	Tie-rod kit classification
7	Painting Dimensions
8	Typical curves
0	Pressure drop (P - T)
	Pressure drop (P - A/B)
	Pressure drop (A/B - T)
	Direct relief valve curve Antishock valve curve
	Combined valve curve
10	Inlet Section
	Order example
	Inlet side classification
	Valve identification
	Valve arrangement Inlet position and available thread type
13	Working section
	Order example
	Spool identification
	Spool actuation classification
	Spool return action classification - Spring load values Work section identification
	Auxiliary valves identification
24	Outlet section (version 1 outlet)
	Order example
	Outlet section (HPCO version outlet)
	Order example - HPCO version outlet
20	Carry-over connection (HPCO)
28	DVS10 Spare parts list Gasket kits
31	Installation
33	General conditions and patents
33	deneral conditions and patents

GENERAL SPECIFICATIONS

Standard working conditions

Description	Value
Ambient operating temperature range	-40°C / +60°C
Kinematic viscosity range	10 ÷ 300 cSt
Max contamination level	9 (NAS 1638) - 20/18/15 (ISO 4406:1999)
Recommended filtration level	β10 > 75 (ISO 16889:2008)
Internal filter (on electroproportional valves pilot line)	30 μm

All information and diagrams in this catalogue refer to a mineral base oil VG46 at 50°C temperature (32 cSt kinematic viscosity)

Fluid options

Types of fluid (according to ISO 6743/4)	Tempera	Compatible analyst	
Oil and Solutions	min	max	Compatible gasket
Mineral Oil HL, HM (or HLP acc. to DIN 51524)	-25	+80	NBR
Oil in water emulsions HFA	+5	+55	NBR
Water in oil emulsions HFB	+5	+55	NBR
Polyglycol-based aqueous solution HFC	-10	+60	NBR

For special applications and different fluids, please call our Technical Department.

ORDER EXAMPLE

DVS10/1: IR 001 150 A U03 W001A H001 F001A RP U03 01 PA 100 05 PB

TYPE: **DVS10**: product type

/1: working section number

1) INLET ARRANGEMENT: pag. 10

IR 001 inlet side and valve type

150 setting (bar)

A U03 inlet position and available thread type

2) WORK SECTION ARRANGEMENT: pag. 13

W001A spool type


H001 spool actuation type F001A spool return action type RP U03 type and thread section 01 PA 100 auxiliary valve (port A) 05 PB auxiliary valve (port B)

3) OUTLET ARRANGEMENT: pag. 24

TJ outlet type

A U04 outlet position and available thread type

Ordering row 2 must be repeated for every work section

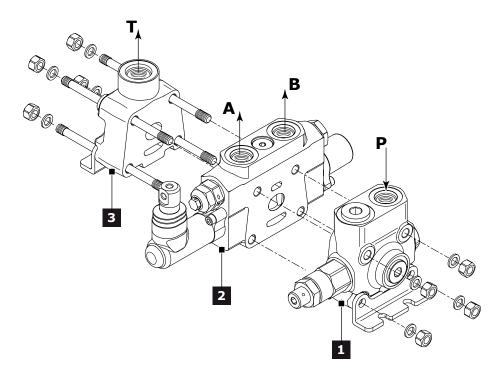

Standard thread


The connection ports size is indicated by an ordering code common for all Hydrocontrol products. Following table shows all available connections; for ordering code refer to table on page 32.

Ports	BSP (ISO - 228)	Code	UN-UNF (ISO - 725)	Code
Inlet Port (P)	G 3/8 - G 1/2	G03 - G04	3/4"-16 UNF / 7/8"-14 UNF	U03 - U04
Ports (A - B)	G 3/8	G03	3/4" - 16 UNF	U03
Outlet (T) - Carry over (HPCO)	G 1/2	G04	7/8" - 14 UNF	U04
Hydraulic Pilot	G 1/4	G02	9/16" - 18 UNF	
Pneumatic Pilot	G 1/8	-	NPTF 1/8-27	

1 hydro control

Tie-rod kit classification (appendix "A")

Tie rod kit allows the correct assembly of sectional valves. Tie rod's length depends on the number of sections; each valve is assembled with tie rod kits including a tie rod, two nuts and two washers. DVSD10 requires 4 tie-rod kits.

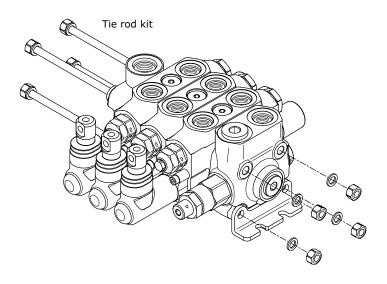

Tie rod kit	Order Code	Lenght (mm)	Clamping Torque (Nm)	Quantity	
DVS10/1	300166001	135			
DVS10/2	300166002	170			
DVS10/3	300166003	205			
DVS10/4	300166004	240			
DVS10/5	300166005	275			
DVS10/6	300166006	310	25	4	
DVS10/7	300166007	345			
DVS10/8	300166008	380			
DVS10/9	300166009	415			
DVS10/10	300166010	450			
DVS10/11	300166011	485			
DVS10/12	300166012	520			


Painting

On request, all Hydrocontrol valves can be delivered painted (RAL 9005 black primer).


Order example of DVS10/1 painted:

DVS10/1 IR 001 150 A U03 W001A H001 F001A RP U03 01 PA 100 05 PB TJ A U04 P006/1 N10

The painting is indicated with the following value:



DIMENSIONS

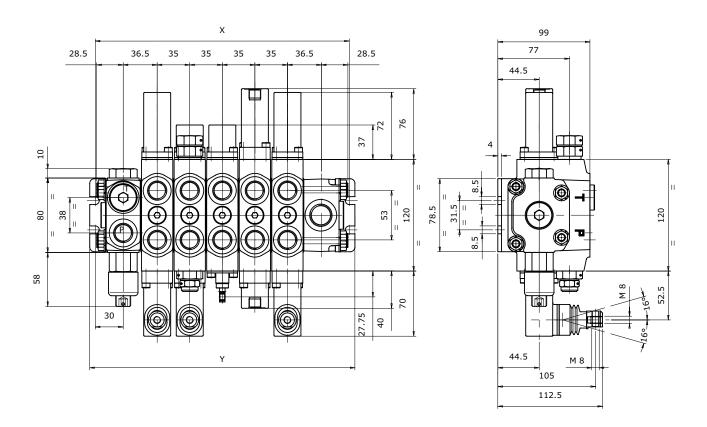



type	/1	/2	/3	/4	/5	/6	/7	/8	/9	/10	/11	/12
X (mm)	133	168	203	238	273	308	343	378	413	448	483	518
Y (mm)	145	180	215	250	285	320	355	390	425	460	495	530
Weights (kg)	6	8.5	11	13.5	16	18.5	21	23.5	26	28.5	31	33.5

TYPICAL CURVES


Indicated values have been tested with standard sectional valve and W001A spool.


Pressure drop (P - T)

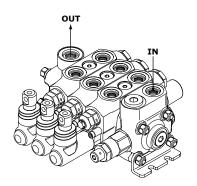

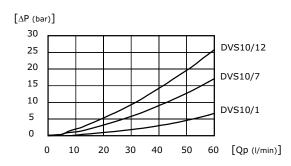



Pressure drop (P - A/B)

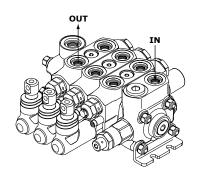

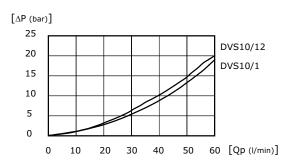

Pressure drop (A/B - T)

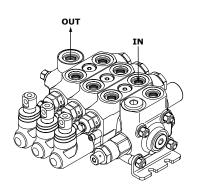

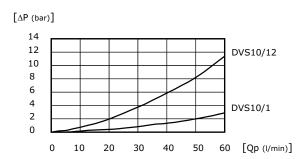




TYPICAL CURVES

Indicated values have been tested with standard sectional valve and W001A spool.


Direct relief valve curve

Setting ranges						
type	type pressure (bar)					
Α	30 - 110					
В	111 - 220					
С	221 - 350					

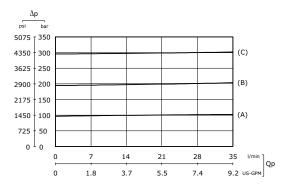


Antishock valve curve

Setting ranges									
tura e	pressu	re (bar)							
type	at full flow	at min. flow							
Α	20 - 100	10-A / 80-A							
В	101 - 220	81-A / 180-A							
С	221 - 350	181-A / 350-A							

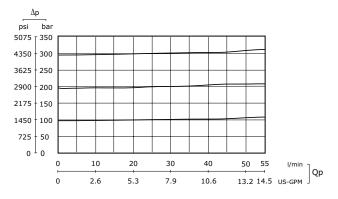

Combined valve curve

Setting ranges									
tuno	pressu	re (bar)							
type -	at full flow	at min. flow							
Α	20 - 60	10-A / 40-A							
В	61 - 100	41-A / 80-A							
С	101 - 220	81-A / 180-A							
D	221 - 350	181-A / 350-A							

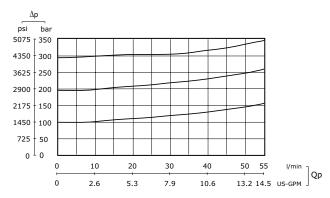




INLET SECTION

Order example

			IR	001	150	A U03
	IR	inlet side classification				
1.	001	valve arrangement				
	150	setting (bar) —				
2.	A U03	inlet position and available thread type —				

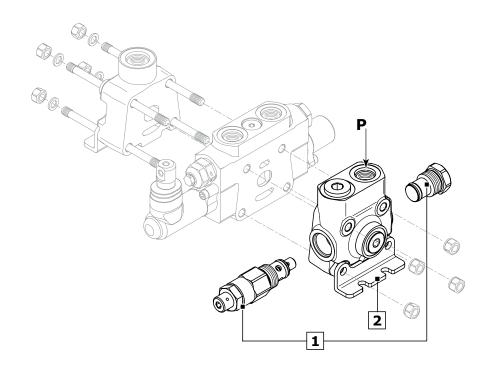


Rif.	Code	Description	Page
	IR	Sectional valve with right inlet section	11
_	IL	Sectional valve with left inlet section	
	001	Direct acting pressure relief valve	
1	019	without valves	11
	A G03	Upper inlet (thread G 3/8)	
	C G03	Central side inlet (thread G 3/8)	
_	E G03	Upper inlet (inlet-outlet) (thread G 3/8)	40
2	A U03	Upper inlet (thread 3/4" - 16 UNF)	12
	C U03	Central side inlet (thread 3/4" - 16 UNF)	
	E U03	Upper inlet (inlet-outlet) (thread 3/4" - 16 UNF)	

NOTE: when ordering a relief valve it is necessary to specify factory setting (example 150).




Inlet side classifications

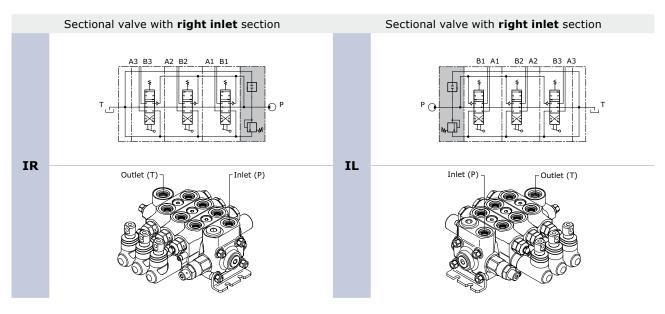

Valve identification

type	schema	layout	description	type	schema	layout	description
1	T P		Direct acting pressure relief valve	3	<u>T</u> P		Relief valve plugged

Valve arrangement

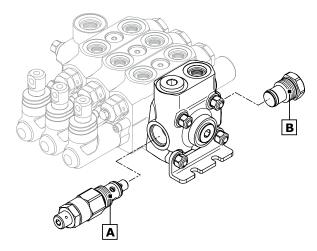

Combination valve example: 001 = 1A - 3B

001	Combination valve —
1A	Pressure relief valve in port A————
3B	Relief valve plugged in port B

The code identifies:


with a number, the type of valve; with a letter its position on the inlet section.

- (A) = spool action side
- (B) = spool return action side

NOTE: when ordering a main relief valve it is necessary to specify setting

			рог	rt B
AVAILABLE COMBINATIONS ON INLET				
	SECTI		1	3
t A		1		001
port		3	017	019



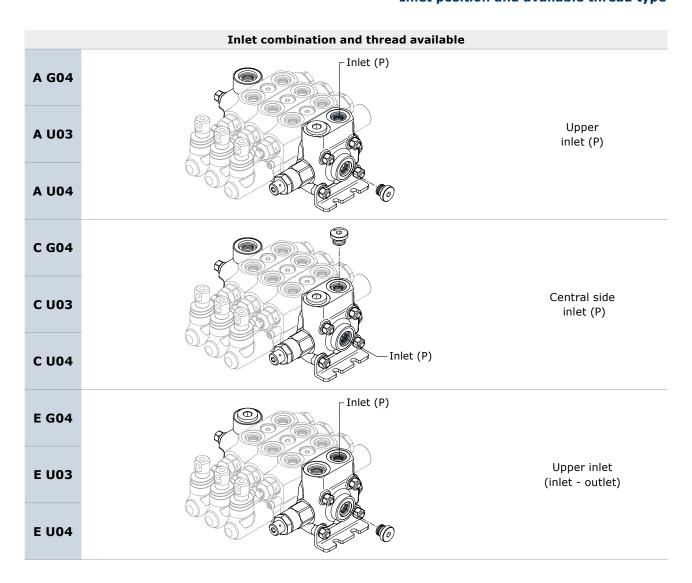


NOTE: code "E" on inlet section obliges to choice "E", "W" or "Y" on outlet section.

WORKING SECTION

Order example:

		W001A	H001	F001A	RP U03	01 PA 100	05 PB	
1.	W001A	spool type						
2.	H001	spool actuation type	spool actuation type					
3.	F001A	spool return action t	spool return action type —					
4.	RP U03	section and thread type						
5.	01 PA 100	auxiliaty valve (port A - handle side)						
6.	05 PB	auxiliaty valve (port	B - cap si	de) ———				

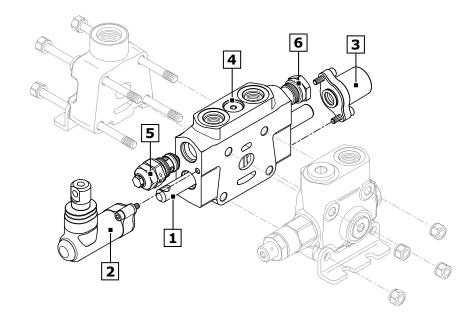

Rif.	Code	Description	Page
1	W001	3 positions double-acting	14
	W002	3 positions double-acting A-B to tank	
2	H001	Protected lever	16
2	H005	hydraulic actuation	16
	F001A	3 positions spring-centred spool (spring A)	
3	F002A	3 positions spring-centred spool detent in A and B (spring A)	17
	RP G03	Parallel circuit (G 3/8)	
4	RP U03	Parallel circuit (3/4"-16 UNF)	22
•	RT G03	Parallel-Tandem circuit (G 3/8)	22
	RT U03	Parallel-Tandem circuit (3/4″-16 UNF)	
	01 PA 100	Antishock valve (port A)	22
5	05 PA	Prearrangement for auxiliary valve (port A)	23
_	01 PB 100	Antishock valve (port B)	
6	05 PB	Prearrangement for auxiliary valve (port B)	23

NOTE: (*) Leave out the spool return action code when choosing H005. Sections designed to house auxiliary valve option require double choice on work ports A and B. Always indicate setting value when using antishock and combined valve: **01 PA (100) - 03 PA (120)**

Spool identification

order example of spool: W001 A J10

W001 A J10	spool schema spool type restricted service ports	3 positions double-acting standard spool restriction on diameter (0,10 mm in A and B)	
W001	3 positions double-act	ing	T P
W002	3 positions double-act	ring A and B to tank	T B O A
W003	3 positions double-act	ing A to tank B blocked	T B O A T P
W004	3 positions double-act	ing A blocked B to tank	T B Q A T T P
W005	3 positions single - ac	ting on A	T P
W006	3 positions single - ac	ting on B	T T P
W012	4 positions double-act	ring with float in the $4^{ m th}$ position	T P P
W015	3 positions double-act	ing series	T T T T P
W020	4 positions double-ac	ting with float in the 4 th position	B O A

NOTE:

There are two types of spools available with floating position:

- FLOAT IN SPOOL (code W012)
- FLOAT OUT SPOOL (code W020)

Is always necessary to specify the type of spools installed in the float function.

Further information are available in the "spool return action" section.

For spool W012 is necessary to apply detent kit number F005, or F017; for spool W020 is necessary to apply detent kit number F015, or F016. W012, W020 spools need a special machining on the valve body. W015 spool need RS type body.



spools with restricted service ports						
code	circuit	restriction on diameter (mm)	section (mm²)	hydraulic schema		
J10	A-B IN T	0,10	2,66	T P		
K10	A IN T	0,10	2,66	T B O A		
Y10	B IN T	0,10	2,66	T P		

spool type available (inlet flow)						
CODE	Q = 45 I/min A	Q = 30 I/min B	Q = 15 l/min E			
W001	W001A	W001B	W001C			
W002	W002A	W002B	W002C			
W003	W003A	W003B	W003C			
W004	W004A	W004B	W004C			
W005	W005A	W005B				
W006	W006A	W006B				
W012	W012A	W012B				
W015	W015A					
W020	W020A	W020B				

Different spools are available on request.

Plaese contact our Sales department for more information.






Spool actuation classification for manual control


code	description	dimensions	configuration
H001	Protected lever	25 S S S S S S S S S S S S S S S S S S S	
H002	Protected lever rotated 180°	55.5 78.25	
H004	Control without lever (tang)	Ø6	
Н030	Control without lever (clevis)	Ø 4.8 Ø 4.8 41 46.6	

Spool actuation classification for Hydraulic control

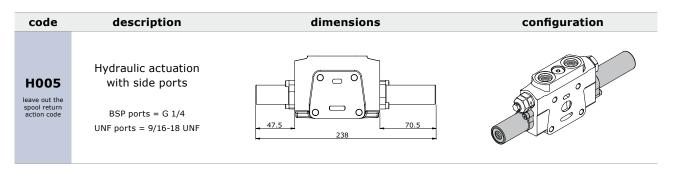

Hydraulic pilot control curve

The diagram shows the spool stroke as a function of the pressure operating.

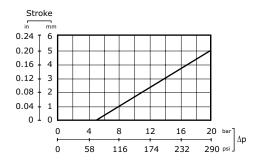






Spool return action classification - Springs load values

Spool return kits have three different sprong types; following the codes depending on spring loads.

Spring type					
Code	A (standard spring)	B (soft spring)	C (heavy spring)		
Preloading	98 N	71 N	120 N		
End of stroke	125 N	102 N	150 N		
Spool return action identification example					
Code	F001A	F001B	F001C		



Spool return action classification

code	description	schema	dimensions	configuration
F001A	3 positions	- ₩ B 0 A =		
F001C	spring-centred spool		40.5	
F002A	3 positions spring-centred spool detent in A and B	BA O BOA		
F003A	3 positions spring-centred spool detent in A	BOA-	76.5	
F004A	3 positions spring-centred spool detent in B	B N N N	<u>, 79.9</u>	



Detent kit classification


code	description	schema	dimensions	configuration
F005A F005B F005C	4 positions spring-centred spool detent in 4 th pos. (FLOAT IN) (only for W012 spool)			
F017A F017B F017C	4 positions spring-centred spool with feel in 4 th pos. (FLOAT IN) (only for W012 spool)	M BNA4P		
F015A F015B F015C	4 positions spring-centred spool detent in 4 th pos. (FLOAT OUT) (only for W020 spool)	4 N 4 B N A ==	76.5	
F016A F016B F016C	4 positions spring-centred spool with feel in 4 th pos. (FLOAT OUT) (only for W020 spool)	4 N 4 B N A D		



Electrohydraulic control specifications

Operating temperature range
Max inlet pressure
Reduced pressure
Back pressure on (T)
Filtering degree
Racommended pilot pipe size

-20°C / +80°C 350 bar 16 bar 3 bar 25 μ assoluti Ø 6 mm - G 1/4

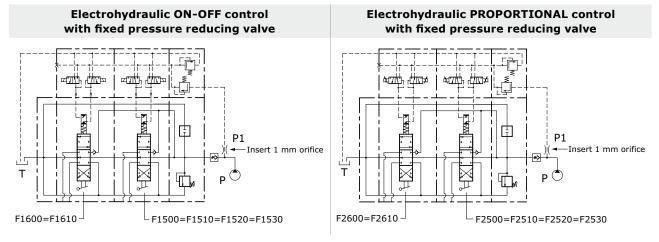

Proportional control kit, mechanically retrooperated, allows the maximum precision of positioning, limiting the hysteresis. The control is operated with PWM control of the current. PWM frequency suggest: 60-80 Hz

regolation currents					
Nominal voltage (V)	Resistance R ₂₀ (Ohm)	Current min (A)	Current max (A)		
12 vdc	3,7	0,9	1,7		
24 vdc	15,5	0,45	0,85		

Electrohydraulic control classification

code	description	dimensions	configuration
F1600	3 positions electrohydraulic control ON - OFF 12 Vdc	244.5	
F1610	3 positions electrohydraulic control ON - OFF 24 Vdc	85.5 91.5 137.5	
F2600	3 positions electrohydraulic control PROPORTIONAL 12 Vdc		
F2610	3 positions electrohydraulic control PROPORTIONAL 24 Vdc	85.5 91.5 137.5 153.5	

Electrohydraulic ON-OFF control is stackable with electrohydraulic PROPORTIONAL control (F2600 = F2610). Control kit already includes ortifice to make spool displacement more gradual.



Electrohydraulic control with fixed pressure reducing valve classification

code	description	configuration
F1500	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P - T inlet side (12 vdc)	
F1510	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P - T inlet side (24 vdc)	T 43.5 28.5
F2500	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P - T inlet side (12 vdc)	
F2510	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P - T inlet side (24 vdc)	Port BSP (P - T) = G 1/4 Port UNF (P - T) = 9/16"18 UNF
F1520	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P inlet - T outlet (12 vdc)	
F1530	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P inlet - T outlet (24 vdc)	T 43.5 13
F2520	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P inlet - T outlet (12 vdc)	
F2530	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P inlet - T outlet (24 vdc)	Port BSP (P - T) = $\frac{G}{1/4}$ Port UNF (P - T) = $\frac{9}{16}$ 18 UNF

Control tie rod assembly

The lenght of the control tie rod, will change depending on the section numbers; in this way it will be easy to install in the right way the sections and avoid any misassembly. Each kit is composed by 2 tie rods, 2 plugs, 2 connection ports and spacers according to the section number.

NOTE: the control tie rod kit has always to be oedered separately.

Reducing valve, combined with electrohydraulic control kit has to be calculated as a normal working section.


ORDER EXAMPLE:

Complete valves with 3 sections F1600 requires a complete tie-rod kit /3.

Complete valves with 2 sections F1600 and 1 section with F1500 (reducing valve) requires a complete tie-rod kit /4.

Order code fixed pressure reducing valve:

915000303 = reducing valve for BSP ports 915000312 = reducing valve for UNF ports

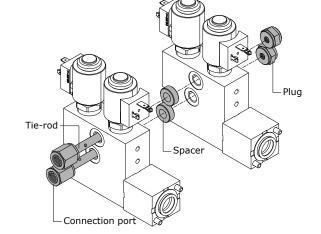

Order code for control tie rod (BSP):

320103001 = control tie rod /1**320103002** = control tie rod /2 320103003 = control tie rod /3**320103004** = control tie rod /4 320103005 = control tie rod /5**320103006** = control tie rod /6 **320103007** = control tie rod /7 **320103008** = control tie rod /8 320103009 = control tie rod /9

Order code for control tie rod (UNF):


320103026 = control tie rod /1 320103027 = control tie rod /2320103028 = control tie rod /3**320103029** = control tie rod /4 320103030 = control tie rod /5**320103031** = control tie rod /6 **320103032** = control tie rod /7 320103033 = control tie rod /8 320103034 = control tie rod /9




Compatibility table

										SPO	OOL TY	/PE									
SPOOL ACTION TYPE	W001A	W001B	W001C	W002A	W002B	W002C	W003A	W003B	W003C	W004A	W004B	W004C	W005A	W005B	W006A	W006B	W012A	W012B	W015A	W020A	W020B
H001	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
H002	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
H004	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
H005	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
H030	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SPOOL											OOL TY										
RETURN ACTION TYPE	W001A	W001B	W001C	W002A	W002B	W002C	W003A	W003B	W003C	W004A	W004B	W004C	W005A	WOOSB	W006A	W006B	W012A	W012B	W015A	W020A	W020B
F001	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			•		
F002	•	•																			
			•	•	•	•	•	•	•	•	•	•	•	•	•	•			•		
F003	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			•		
F003	•	•																			
			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
F004			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F004			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


Work section identification

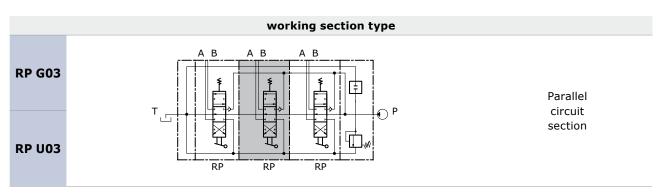

When the spool is operated it intercepts the by-pass gallery by diverting the flow of oil to service port A or B. If two or more spools are actuated at the same time, the oil will power the service port that has the lower load; by throttling the spools, the flow of oil can be divided between two or more service ports.

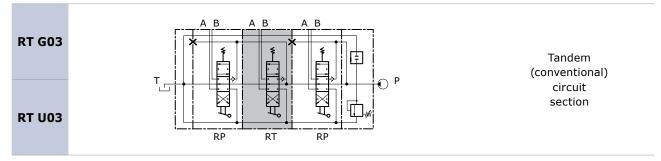

When the spool is operated it intercepts the switch gallery by diverting the flow of oil to service port A or B. The Tandem circuit is powered by the switch gallery thus permitting the use of just one work section at a time. The section downstream from the tandem section that has been actuated does not operate, the upstream section has priority.

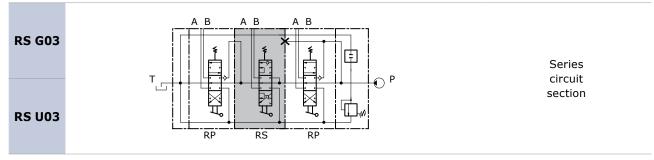

When the spool is operated it intercepts the switch gallery by diverting the flow of oil to service port A or B. The oil that flows back from the actuator is carried to the switch gallery thus making it available to the service ports downstream from the series section. The pressure drop downstream is added to the pressure drop of the section itself.



Auxiliary valve identification

code	docarintian	schema	son#surption		setting ra	nge (b	oar)
code	description	scnema	configuration	type	at full flow	type	at min. flow
	Antishock			A	20 / 100	A	10-A / 80-A
01PA	valve	W.		В	101 / 220	В	81-A / 180-A
	(port A)			С	221 / 350	С	181-A / 350-A
02PA	Anticavitation valve (port A)	\bigcirc					
				A	20 / 60	A	10-A / 40-A
0204	Combined	;; ;; ;		В	61 / 100	В	41-A / 80-A
03PA	valve (port A)	:-[, _\$]W		С	101 / 220	С	81-A / 180-A
				D	221 / 350	D	181-A / 350-A
05PA	Prearrangement for auxiliary valve (port A)	ΗH					

					setting ra	ange (b	ar)
code	description	schema	configuration	type	at full flow	type	at min. flow
	Antishock			A	20 / 100	A	10-A / 80-A
01PB	valve	₩Ţ,		В	101 / 220	В	81-A / 180-A
	(port A)			С	221 / 350	С	181-A / 350-A
02РВ	Anticavitation valve (port A)	\bigcirc					
				A	20 / 60	A	10-A / 40-A
0200	Combined	; 		В	61 / 100	В	41-A / 80-A
03PB	valve (port A)	;-{ }\w		С	101 / 220	С	81-A / 180-A
				D	221 / 350	D	181-A / 350-A
05РВ	Prearrangement for auxiliary valve (port A)	HН					


Auxiliary valve - Setting range

Sections designed to house auxiliary valve option require double choise on work ports A and B. Always indicate setting value when using antishock valve and combined valve:

01PA (120) = setting at full flow 01PA (120-A) = setting at min. flow

OUTLET SECTION (VERSION 1 OUTLET)

Order example

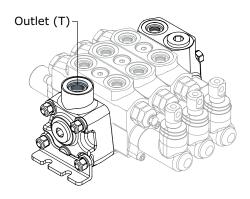


			TJ	A U04
1.	TJ	outlet section ty	pe	
2.	A U04	outlet position ar	nd available th	read type

Rif.	Code	Description	Page
	TJ	Outlet section with single return (T) right-side inlet (P)	
	TK	Outlet section with single return (T) left-side inlet (P)	
	A G04	Upper outlet (thread G 1/2)	25
_	C G04	Central outlet (thread G 1/2)	
2	A U04	Upper outlet (thread 7/8" - 14 UNF)	
	C U04	Central outlet (thread 7/8" - 14 UNF)	

OUTLET SECTION (HPCO VERSION OUTLET)

Order example - HPCO version Outlet

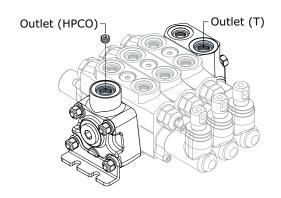



			TM	W U04	
1.	тм	outlet section ty	pe		
2.	W U04	outlet position ar	nd available t	hread type	

Rif.	Code	Description	Page
1	TM TN	Outlet section with two return (T-HPCO) right-side inlet (P) Outlet section with two return (T-HPCO) left-side inlet (P)	
2	W G04 W U04	HPCO Upper inlet - outlet T (tank) upper outlet section (thread G 1/2) HPCO Upper inlet - outlet T (tank) upper outlet section (thread 7/8" - 14 UNF)	26



Outlet with single tank classification

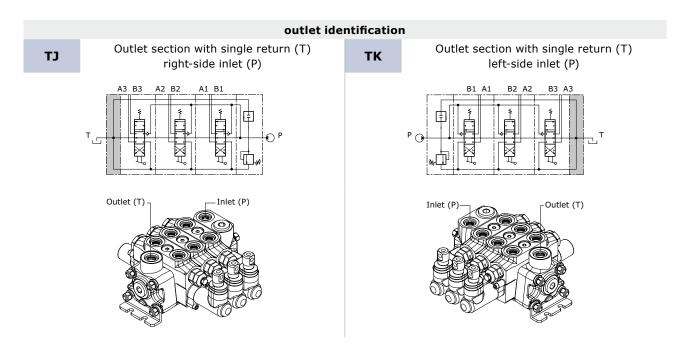


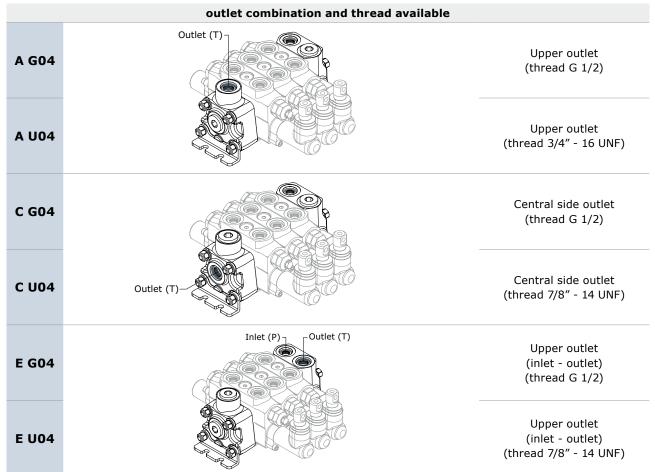


NOTE: code "E" on outlet section obliges to choice E on inlet section.



Outlet with two tanks classification

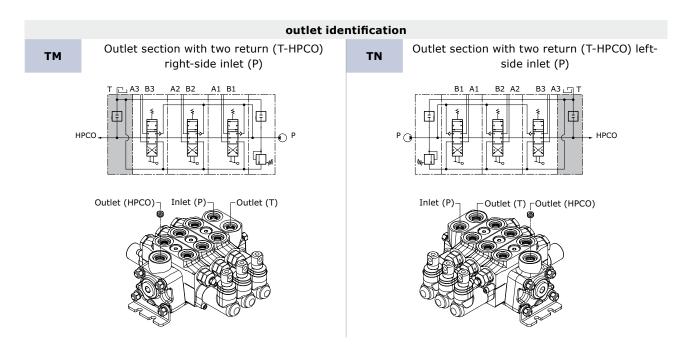

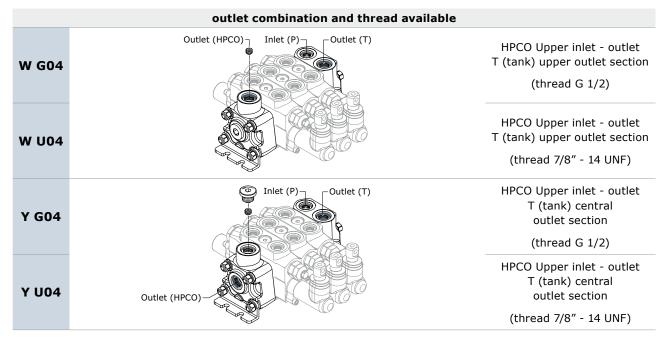


NOTE: code "W" or "Y" on outlet section obliges to choice E on inlet section.




Carry-over connection (HPCO)

This option, available on all DVS10, allows the sectional valve to feed a second valve, by extending the free flow channel. In this configuration, the valve need a separated port for connection to tank.

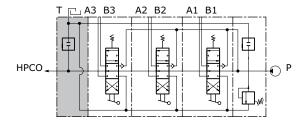

It is possible to transform sectional valve from standard to HPCO version just by ordering the appropriate conic plug:

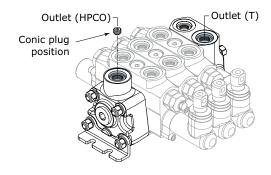


code (HPCO Plug identification)	description	q.ty
413010203	conic plug G 1/4 x 13	1

NOTE: HPCO option needs "E-G04", "E-U03" or "E-U04" inlet arrangement only.



DVS10 SPARE PARTS LIST

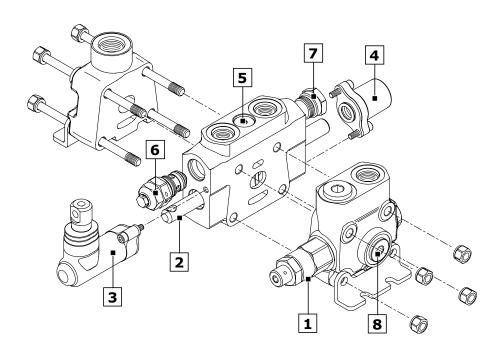


Ref.	Description	Order code	Q.ty	Code	Note
		84642			Setting: 100 bar
1	Direct acting pressure relief valve (*)	29005	1	-	Setting: 200 bar
1		38339			Setting: 300 bar
	Relief valve plugged	430146001	1		
		421266029		W001A	
	3 positions double-acting spool	421266028	1	W001B	
		421266027		W001C	
		421266032		W002A	
2	3 positions double-acting A and B to tank spool	421266031	1	W002B	
		421266030		W002C	
	3 positions single-acting on A	421266041	1	W005A	
	3 positions single-acting on B	421266044	1	W006A	
	4 positions double-acting with float in the 4th pos.	421266053	- 1	W012A	
	4 positions double-acting with float in the 4 pos.	421266056	_ 1	W020A	
	Protected lever	320366001	1	H001 = H002	
	Control without lever	320366003	1	H004 = H030	
	Hydraulic actuation with side ports	320566001	1	H005	
		320766002	1	F001A	
	3 position spring centred spool	320700003	1	F001B	
3		320766001	1	F001C	
	Detent in A and B	320866012	1	F002A	
	Detent in A	320866018	1	F003A	
	Detent in B	320866020	1	F004A	
	Pneumatic control ON-OFF	321166001	- 1	F020A=F021A	BSP ports
	Theumatic control of of t	321166002		F135A=F136A	NPT ports
	Electrohydraulic ON-OFF (12 vdc)	321466005	1	F1600	
4	Electrohydraulic ON-OFF (24 vdc)	321466006	1	F1610	
	Electrohydraulic Proportional (12 vdc)	322066001	1	F2600	
	Electrohydraulic Proportional (24 vdc)	322066002	1	F2610	



Ref.	Description	Order code	Q.ty	Code	Note
	Electrohydraulic ON-OFF (12 vdc) with reducing valve	321466007	1	F1500=F1520	
	Electrohydraulic ON-OFF (24 vdc) with reducing valve	321466008	1	F1510=F1530	
	Electrohydraulic Proportional (12 vdc) with reducing valve	322066003	1	F2500=F2520	BSP ports
	Electrohydraulic Proportional (24 vdc) with reducing valve	322066004	1	F2510=F2530	
4	Electrohydraulic ON-OFF (12 vdc) with reducing valve	321466011	1	F1500=F1520	
	Electrohydraulic ON-OFF (24 vdc) with reducing valve	321466012	1	F1510=F1530	
	Electrohydraulic Proportional (12 vdc) with reducing valve	322066006	1	F2500=F2520	UNF ports
	Electrohydraulic Proportional (24 vdc) with reducing valve	322066007	1	F2510=F2530	
5	Check valve on the work section	320266001	1	-	
		4044			Setting: 100 bar
	Antishock valve on port A	6891	_	01 PA	Setting: 200 bar
	-	9778			Setting: 300 bar
	Anticavitation valve on port A	915083001	_	02 PA	
6		23504	- 1		Setting: 100 bar
	Combined valve on port A	14779		03 PA	Setting: 200 bar
		38346			Setting: 300 bar
	Prearrangement for auxiliary valve on port A	430430001		05 PB	
		4044			Setting: 100 bar
	Antishock valve on port B	6891		01 PB	Setting: 200 bar
		9778			Setting: 300 bar
7	Anticavitation valve on port B	915083001	_ 1 ·	02 PB	
•	_	23504			Setting: 100 bar
	Combined valve on port A	14779	_	03 PB	Setting: 200 bar
		38346			Setting: 300 bar
	Prearrangement for auxiliary valve on port B	430430001		05 PB	
	Plug kit (G 3/8)	43000018		G03	
8	Plug kit (3/4" - 16 UNF)	300066001	_ 1	U03	
	Plug kit (G 1/2)	430000019	_ •	G04	
	Plug kit (7/8" - 14 UNF	300066002		U04	

7 hydro control

GASKET KITS

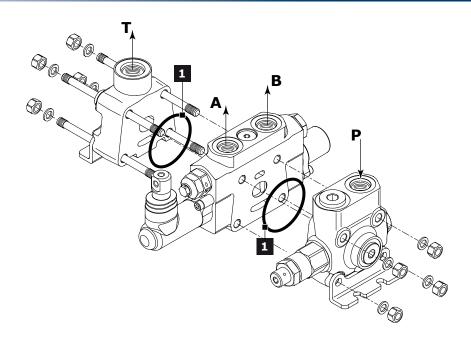

		Intlet and work section	
Rif.	Order code	Description	Q.ty
1	412010634	O.R. 70SH 50,47 x 2,62 (2-136)	1



INSTALLATION

Guidelines


- Mount the control valve securely to a flat surface (recommended 3 point fixing); at the time do not use a hammer to positioning by hitting.
- When handling the control valve, be careful not hold the pilot cover or return spring cap of the spool or accessory valves such as main relief valves and anti-shock relief valves.
- Clean piping materials sufficiently before use.
- Make sure to prevent the port openings from being entered with dust or foreign matters.
- Tighten the port connectors surely with the recommended fastening torques.
- Do not direct the jet of a pressure washing unit directly to the valve.

Fittings tightening torque (Nm)

thread type	port P	Port A - B	Port T
BSP (ISO - 228)	G 3/8	G 3/8	G 3/8
with rubber sealing (DIN 3869)	40	40	40
with copper or steel and rubber washer	40	40	40
UN-UNF (ISO - 725)	3/4" - 16 UNF	3/4" - 16 UNF	3/4" - 16 UNF
with O.R.	40	40	40

General clamping torque

The following table provides the main tightening torques of the sectional valve DVS10:

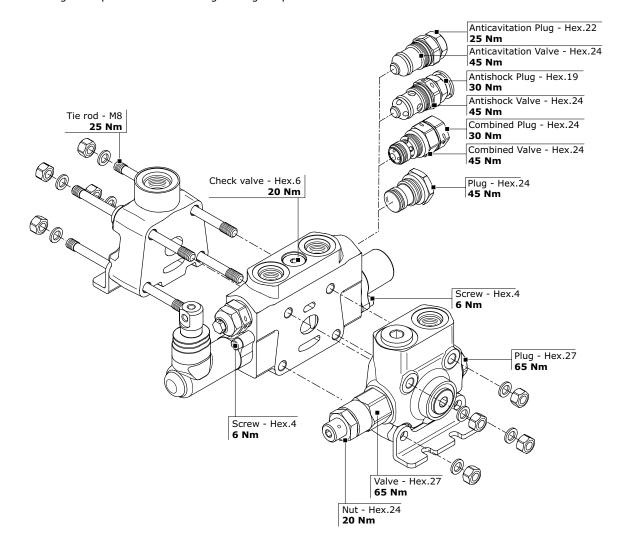

Dimensions - Thread codes


The connection ports size is indicated by an ordering code common for all Hydrocontrol products. Following table shows all available connections.

METRIC TI	HREAD (ISO	9974-1)			
Туре	M18x1,5	M22x1,5	M27x2		
Code	M01	M02	M03		

BSP THRE	AD (ISO 117	79-1)						
Туре	1/4"	3/8"	1/2"	3/4"	1"	1″1/4	1″1/2	2″
Code	G02	G03	G04	G05	G06	G07	G08	G09

UN / UNF	THREAD (IS	O 11926-1)					
Type	9/16" 18 UNF	3/4" 16 UNF	7/8" 14 UNF	1"1/16 12 UNF	1"5/16 12 UNF	1"5/8 12 UNF	
Type	SAE6	SAE8	SAE10	SAE12	SAE16	SAE20	
Code	U02	U03	U04	U05	U06	U07	

Dimensions - SAE Flange codes

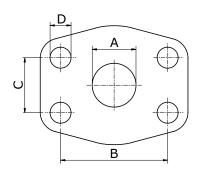

SAE / 3	000 FL	ANGE (IS	O 6162-	-1)								
Type	3/4" (MA)	3/4" (UNC)	1" (MA)	1" (UNC)	1″1/4 (MA)	1"1/4 (UNC)	1″1/2 (MA)	1″1/2 (UNC)	2" (MA)	2" (UNC)	3" (MA)	3" (UNC)
Code	S03	S04	S05	S06	S07	S08	S09	S10	S11	S12	S15	S16
Α	19	19	25	25	32	32	38	38	51	51	76	76
В	47,6	47,6	52,4	52,4	58,7	58,7	69,9	69,9	77,8	77,8	106,4	106,4
С	22,3	22,3	26,2	26,2	30,2	30,2	35,7	35,7	42,9	42,9	61,9	61,9
D	M10	3/8-16	M10	3/8-16	M10	7/16-14	M12	1/2-13	M12	1/2-13	M16	5/8-11


SAE / 6	000 FL	ANGE (IS	O 6162-	-2)				
Type	3/4" (MA)	3/4" (UNC)	1" (MA)	1" (UNC)	1″1/4 (MA)	1"1/4 (UNC)	1″1/2 (MA)	1"1/2 (UNC)
Code	S33	S34	S35	S36	S37	S38	S39	S40
Α	19	19	25	25	32	32	38	38
В	50,8	50,8	57,2	57,2	66,6	66,6	79,3	79,3
С	23,8	23,8	27,8	27,8	31,8	31,8	36,5	36,5
D	M10	3/8-16	M12	7/16-14	M14	1/2-13	M16	5/8-11



GENERAL CONDITIONS AND PATENTS

Product identification

All Hydrocontrol products have an identifying plate placed in specific position.

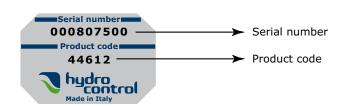

Serial number:

It univocally identifies the physical valve: this provides an easy way to find all sales and production details.

Product code:

It is a number univocally identifying the configuration and pressure settings of a valve.

Introduction

These general conditions apply to all general supplies from Hydrocontrol s.p.a., after receiving orders from the Customer. Should commercial terms such as EXW, DDP, etc be mentioned, of course the Incoterms of the International Chamber of Commerce must be referred to, according to the test existing when the general supply conditions are agreed on.

Management of orders

No Customer's order is binding to Hydrocontrol s.p.a. if Hydrocontrol s.p.a. has not confirmed the order in writing. Hydrocontrol s.p.a. commits to supplying the orders in compliance with the order confirmation that has been issued. Any disagreement with the content of the order confirmation must be communicated in writing to Hydrocontrol s.p.a. within and no later than 5 days from the delivery of the order confirmation. The Customer commits to paying for the goods supplied by Hydrocontrol s.p.a., according to the prices indicated on the order confirmation.

Payment conditions

The Parties agree on the payment terms at the beginning of the supply. The terms will be indicated on the order confirmation. Should the Customer be late with the payments, Hydrocontrol S.p.a. will be entitled to require the payment of interests on arrears based on the exiting Prime Rate increased by 2%. Should there be any payment delay, Hydrocontrol s.p.a. will be entitled not to process the Customer's purchase order, even if it has already been confirmed.

Delivery and shipment

The goods are always supplied Ex Works, even when Hydrocontrol s.p.a. agrees with the Customer that the shipment, or a part of it, will be arranged by Hydrocontrol s.p.a. It is agreed that the Customer will bear the risk of goods deterioration or damaging from the moment the goods are handed by Hydrocontrol s.p.a. to the first carrier.

Product characteristics

Hydrocontrol s.p.a. commits to supplying good quality products, compliant with the technical specifications declared on the technical tables and on the catalogue. Hydrocontrol s.p.a, even without notice, at its own discretion, reserves the right to modify the products as necessary, without these changes altering the main characteristics of the products.

Claims

Any claims about defects on delivered products (just as an example: claims about the packaging, the number, the quantity or the external product characteristics) will have to be notified to Hydrocontrol s.p.a. in writing, within and no later than 7 days from reception of the goods, otherwise the claims will be considered as null and void. Occult defects (the defects of the goods that cannot be spotted with a careful control of the goods received by the Customer), will have to be notified in writing to Hydrocontrol s.p.a. within 7 days from the discovery of the defect, and anyhow no later than 12 months from the delivery of the goods, otherwise the claim will be considered as null and void. Even in case of claim or objection, the Customer will never be entitled to suspend or delay the payments to Hydrocontrol s.p.a. for the products subject to claim or objection nor for any other supply.

GENERAL CONDITIONS AND PATENTS

Warranty

Should the products supplied by Hydrocontrol not be compliant or have the required quality and should this defect be due to Hydrocontrol, Hydrocontrol s.p.a. commits, at its choice, to replace or repair the faulty products, as long as the defect or lack of compliance is notified to Hydrocontrol s.p.a. in writing, as specified at point 6, within and no later than 18 months from product delivery. On the products that have been fixed or replaced in accordance with what specified above, the above-mentioned warranty applies. The 12 month duration starts from the date of repair or replacement. In case of defects, lack of quality or in case of lack of compliance for the supplied products, with the exception of fraud or serious offence, Hydrocontrol s.p.a. only commits to repairing or replacing the faulty products, according to what specified above. This warranty replaces any other Supplier's warranty or liability established by the law. This warranty excludes any other liability contractual or extra-contractual by Hydrocontrol s.p.a. on the products supplied by Hydrocontrol (as a mere example: damage refund, loss of profit, product recall campaign, etc). Hydrocontrol s.p.a. has signed a product civil liability police, with a suitable maximum coverage.

Ownership retention

The products supplied by Hydrocontrol s.p.a. will be owned by the latter until Hydrocontrol receives the complete payment for the supplied goods.

Obligation confidentiality

Hydrocontrol s.p.a. commits to not disclosing the technical and commercial information it receives from the Customer, unless this information has already been publicly disclosed.

Patents

The Customer is not allowed to use the provided Products, or a part of them, their descriptions or drawings protected or not protected by Patent or registered trademark in order to design or make similar products, unless Hydrocontrol s.p.a. previously issues its written authorization. Should Hydrocontrol s.p.a. give its written authorization, all patents, trademarks, registered designs, copyrights and intellectual property rights related or connected to the Products provided by Hydrocontrol s.p.a. will stay Hydrocontrol's property. The Customer commits to respecting the highest confidentiality.

Applicable law and court of jurisdiction

Hydrocontrol s.p.a.'s supplies are regulated by these General Supply Conditions and, for anything not defined here, by the Italian law. Any controversy related, generated or connected to the supply of Products by Hydrocontrol s.p.a., where Hydrocontrol s.p.a. is involved, will be exclusively dealt with by the Court of Bologna.

Walvoil nel mondo - Walvoil worldwide

Sede principale, Filiali e Uffici di rappresentanza

Headquarters, Subsidiaries and Representative Offices

Walvoil S.p.A. - Sede principale - Headquarters

Via Adige, 13/D . 42124 Reggio Emilia . Italy TEL. +39 0522 932411 . info@walvoil.com www.walvoil.com

Business Unit Hydrocontrol

Via Natale Salieri, 6 . 40024 Castel S. Pietro Terme . Bologna . Italy TEL. +39 051 6959411

Galtech Site

Via Portella della Ginestra, 10 . 42025 Cavriago Zona Industriale Corte Tegge . Reggio Emilia . Italy TEL. +39 0522 932411

AUSTRALASIA . AUSTRALASIA

Walvoil Fluid Power Australasia Pty Ltd

13 Vanessa Way . Delahey VIC 3037 . Melbourne . Australia TEL. +61 458 918 750 . australasia@walvoil.com

BRASILE . BRAZIL

Interpump Hydraulics Brasil Ltda - Walvoil Division

Gilberto de Zorzi, 525 . Forqueta Caxias do Sul (RS) TEL. +55 54 3223 2373 . infobrasil@walvoil.com

CANADA . CANADA

Galtech Canada Inc.

3100, Jacob Jordan . Terrebonne . Qc J6X 4J6 . Canada TEL. +1 450 477 1076 Ext:225 . info@galtechcanada.com

CINA . CHINA

Walvoil Fluid Power (Dongguan) Co. Ltd

1st Floor, the Third Factory Area, Sijia, Shijie Town, Dongguan City, Guangdong province, China. TEL. +86 769 81816189-8020 . FAX. +86 769 81816589 info@walvoil.com.cn

COREA DEL SUD . SOUTH KOREA

Walvoil Fluid Power Korea Ltd.

80-15, Oseongsandan 1Ro, Oseong-Myun, Pyungtaek, Kyungki . Korea 451-872 . TEL. +82 31 682 6030 info@walvoil.co.kr

FRANCIA . FRANCE

Walvoil Fluid Power France

362 rue de Bretagne . Vritz . 44540 Vallons-de-l'Erdre TEL. +33 2 41 94 41 06 . france@walvoil.com

INDIA . INDIA

Walvoil Fluid Power (India) PVT. LTD.

No. 19, 2nd Cross, 2nd Main, KIADB Industrial Area, Attibele, Anekal Taluk, Bangalore – 562107 TEL. +91 80 0614 24000 . info@walvoil.co.in

U.S.A. . U.S.A.

Walvoil Fluid Power Corp.

4111 North Garnett Tulsa, OK 74116, USA TEL. +1 918 858 7100 . info@walvoilfluidpower.com

Walvoil Fluid Power Corp. Hydrocontrol Business Unit

1109, Technology Drive . Red Wing . MN 55066 . U.S.A. TEL. +1 651 212 6400 . usa@hydrocontrol-inc.com

2nd edition DVS10.01 www.walvoil.com



